


iPod

**\*\*READ THIS FIRST\*\***

**Changing Sources (iPod, HD Radio, \*Satellite Radio, Aux)**

- Press the "SR" icon on the screen
- Press the "SR123" icon repeatedly to toggle through the Media Gateway sources
- When the "SR123" icon is pressed the radio will display SAT 1, 2 or 3 for a moment then you will see the mode. (ex: HD-FM1, IPOD, AUX or SAT)

\*if available

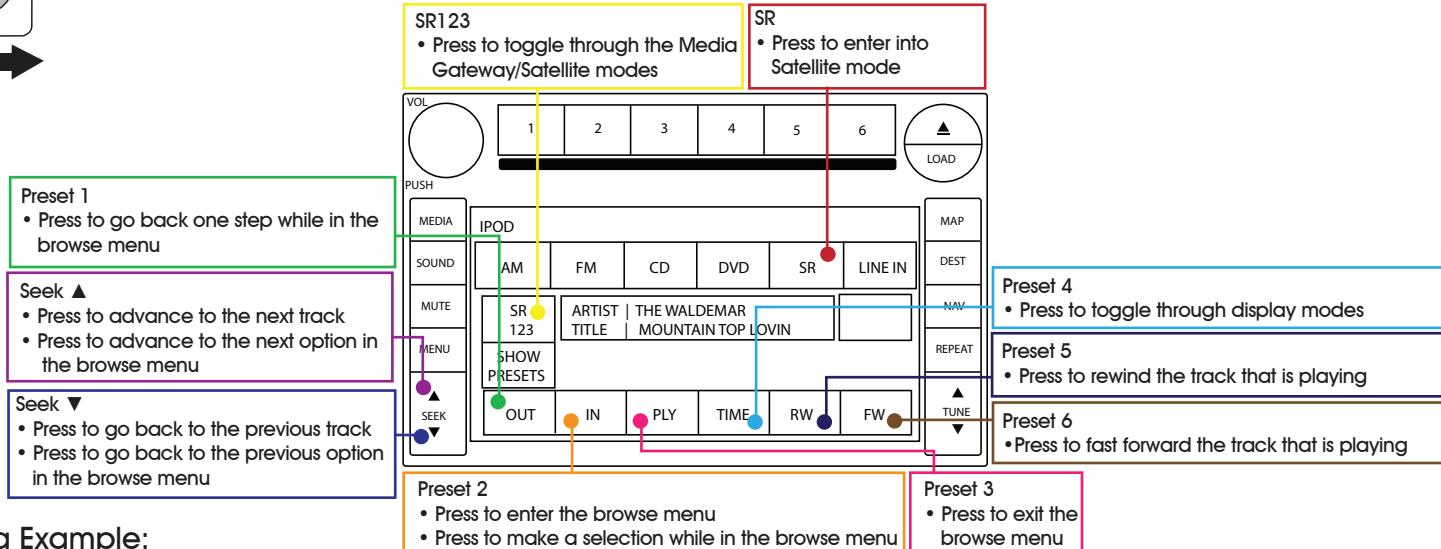

**Browsing Example:**

To select the song "Star-Spangled Banner" through the Artist category




(Actual Radio Appearance may differ from representation.)



**\*\*READ THIS FIRST\*\***

**Changing Sources (iPod, HD Radio, \*Satellite Radio, Aux)**

- Press the "SR" icon on the screen
- Press the "SR123" icon repeatedly to toggle through the Media Gateway sources
- When the "SR123" icon is pressed the radio will display SAT 1, 2 or 3 for a moment then you will see the mode. \*if available

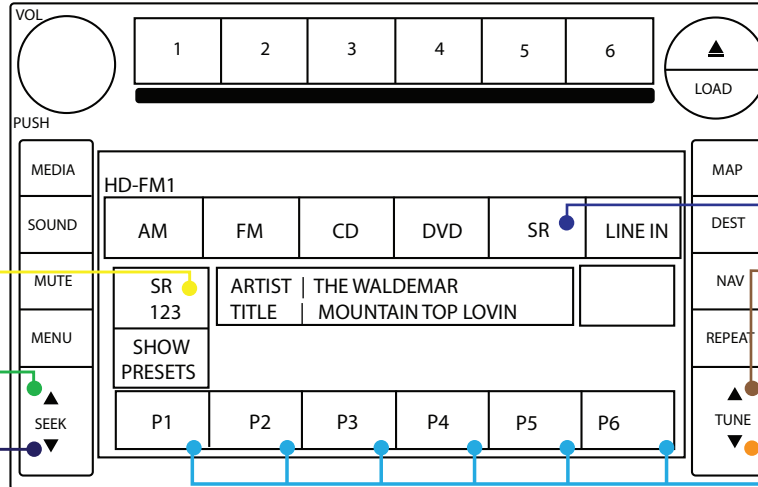

**SR123**  
• Press to toggle through the Media Gateway/Satellite modes

**Seek ▲**  
• Press to seek up to the next available station

**Seek ▼**  
• Press to seek down to the next available station

**SR**  
• Press to enter into Satellite mode

**Tune ▲**  
• Press to tune up one station

**Tune ▼**  
• Press to tune down one station

**Presets 1-6**  
• Press and hold to store a station into memory  
• Press and release to recall a station in memory

**HD RADIO EXAMPLE**

To select an HD radio station.  
Press the SEEK ▲ button to get to the desired station. The Radio will auto lock on to an HD Radio Station if available; example: 92.5 HD1 MHZ. When locked into an HD Radio Station, press the SEEK ▲ button to access multi-cast HD Station(s) (if available); example: 92.5 HD2 MHZ

To store a radio station into preset memory.  
Press and hold any preset (1-6) to store a station into memory. The screen will display "PR:SAVED"

To recall a station stored into preset memory.  
Press and release the desired preset that you wish to recall.

(Actual Radio Appearance may differ from representation.)